

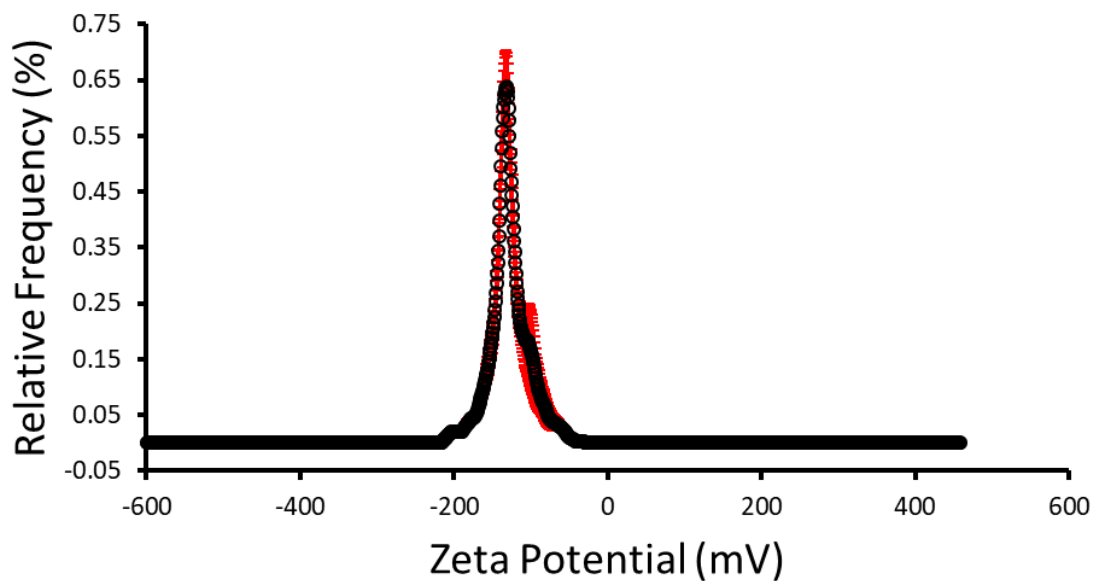


Figure S100 - The average zeta potential distribution calculated using 9 runs for compound **45** (5.56 mM) in an EtOH:H₂O (1:19) solution at 298 K. Average measurement value -35.3 mV.

Surface Tension Measurements and Critical Micelle Concentration (CMC) Determination

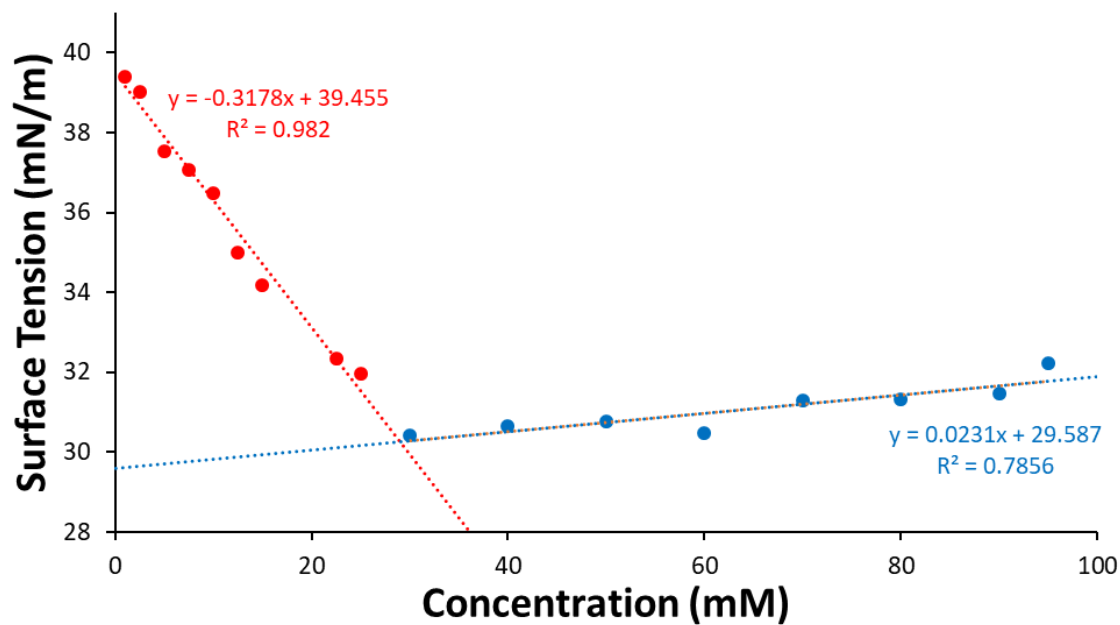


Figure S101 - Calculation of CMC (28.95 mM) for compound **15** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

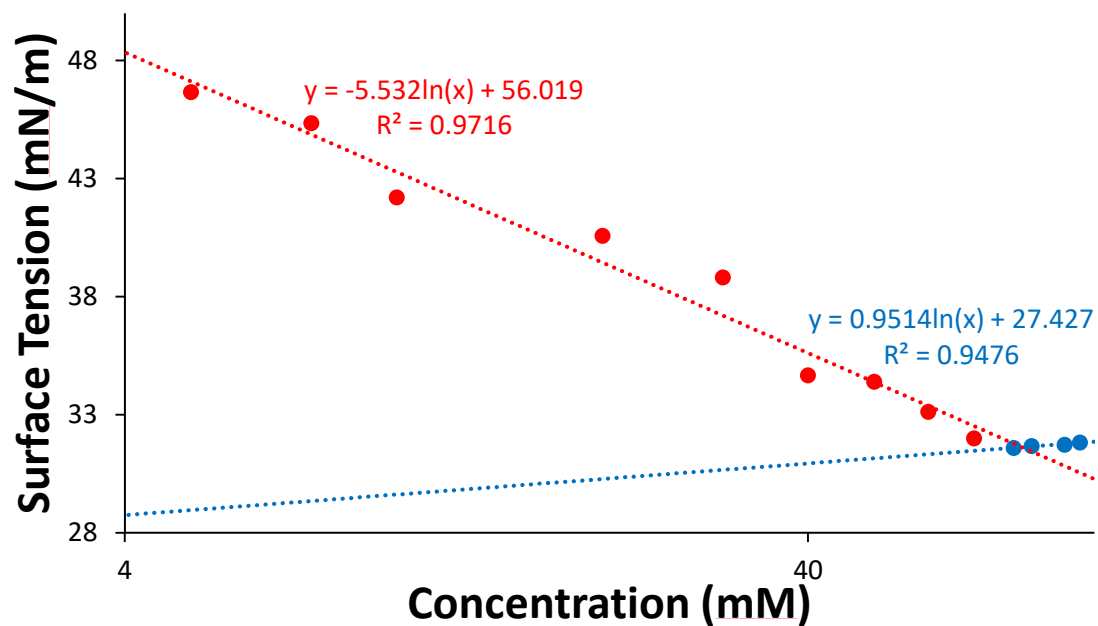


Figure S102 - Calculation of CMC (82.27 mM) for compound **16** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

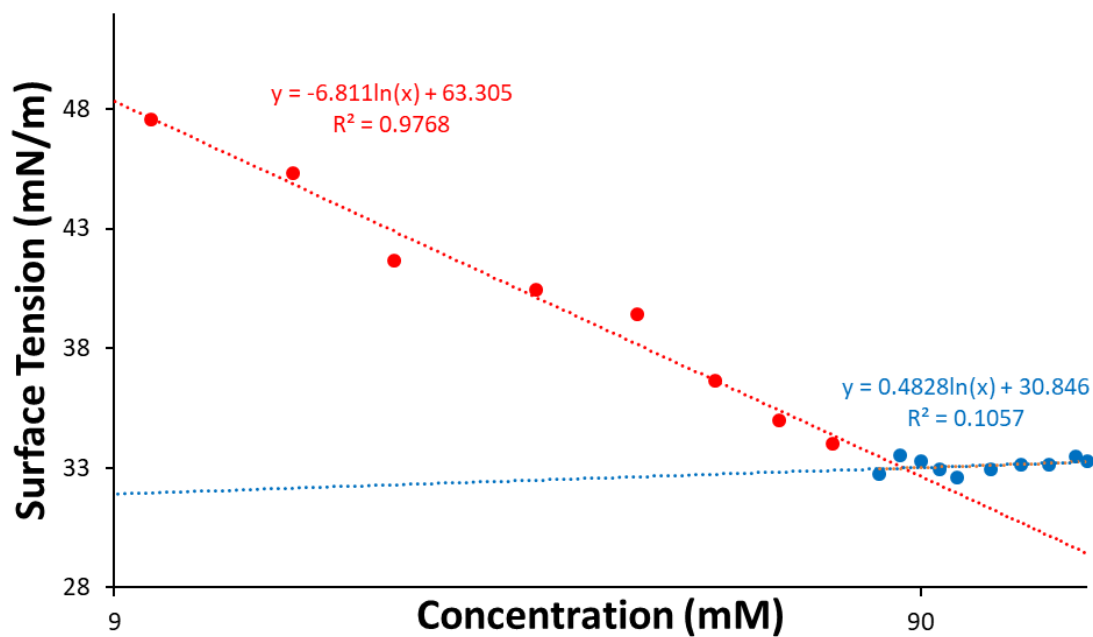


Figure S103 - Calculation of CMC (85.65 mM) for compound **17** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

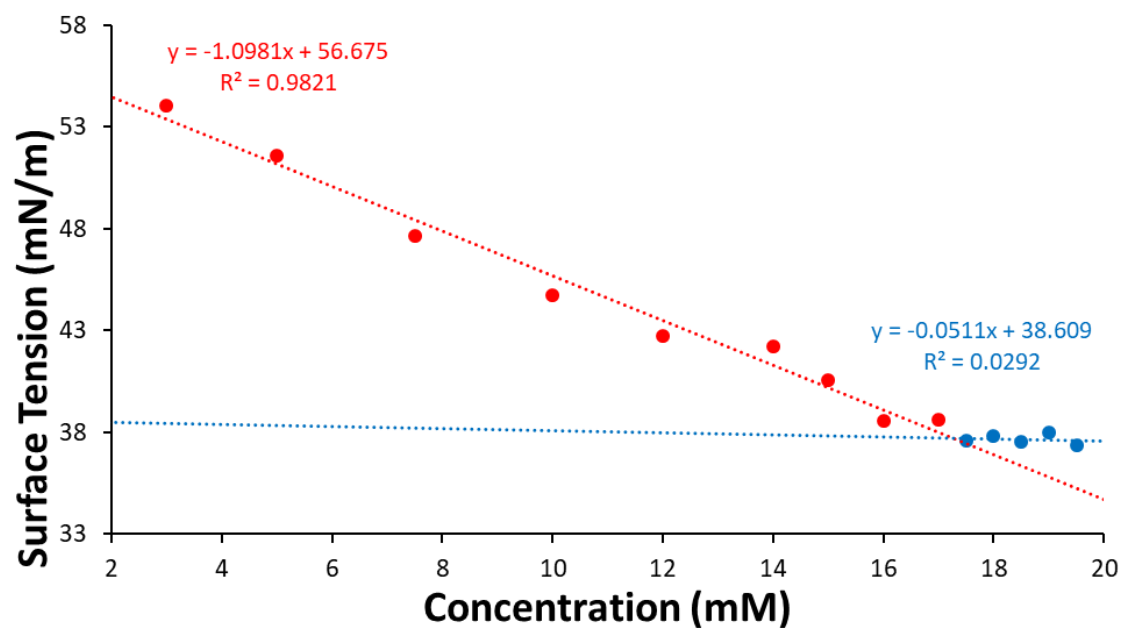


Figure S104 - Calculation of CMC (17.25 mM) for compound **18** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

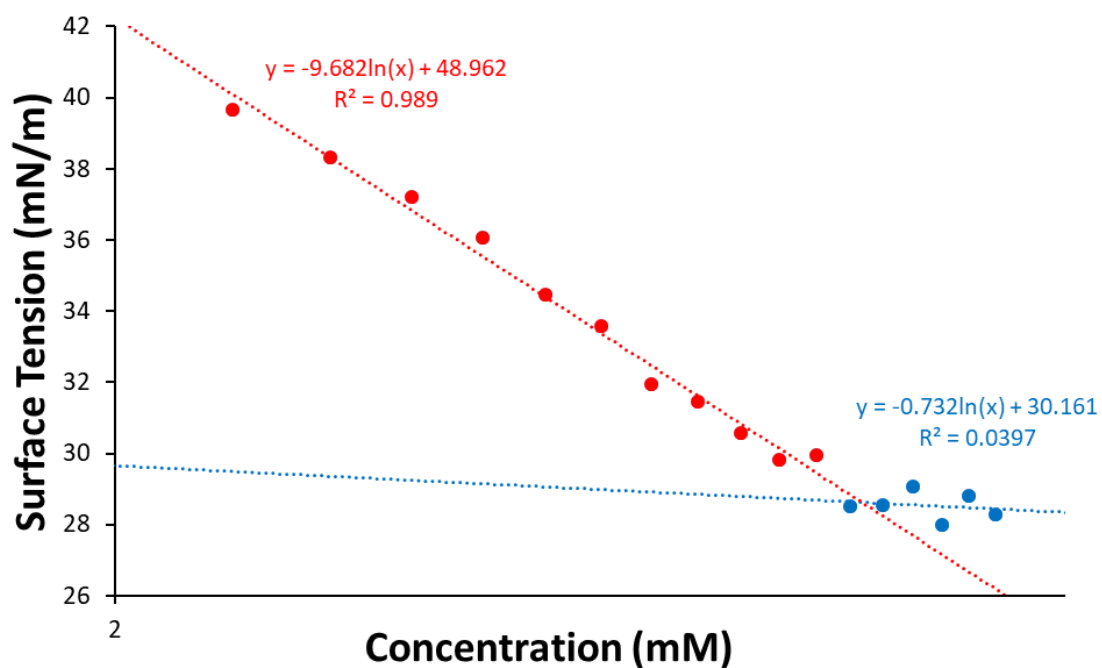


Figure S105 - Calculation of CMC (3.69 mM) for compound **23** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

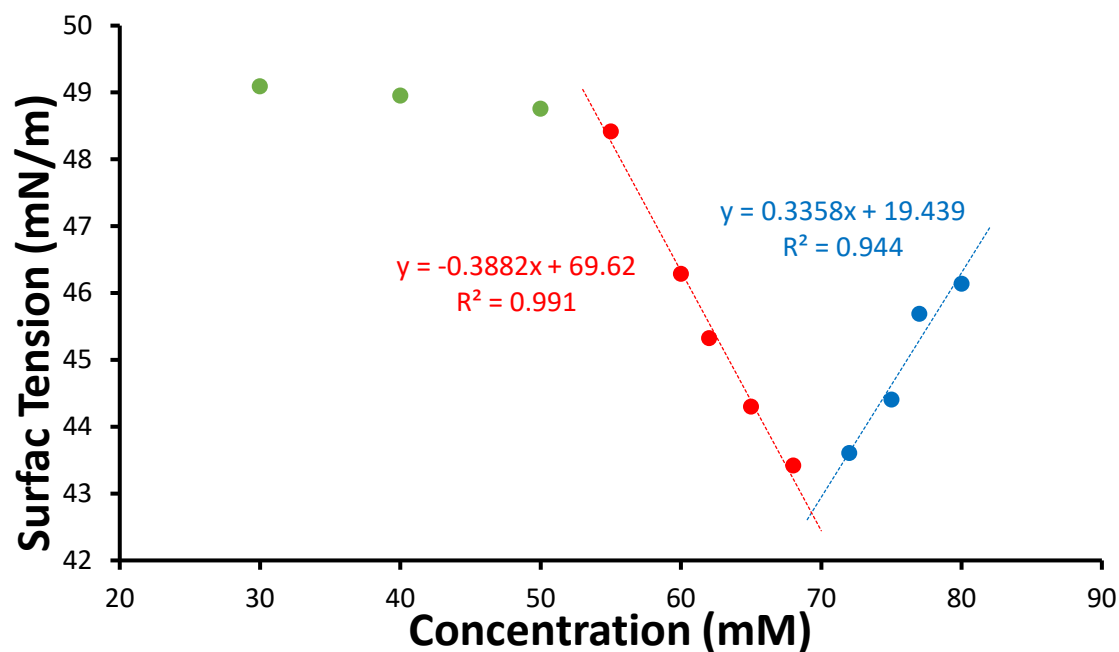


Figure S106 - Calculation of CMC (69.73 mM) for compound **40** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

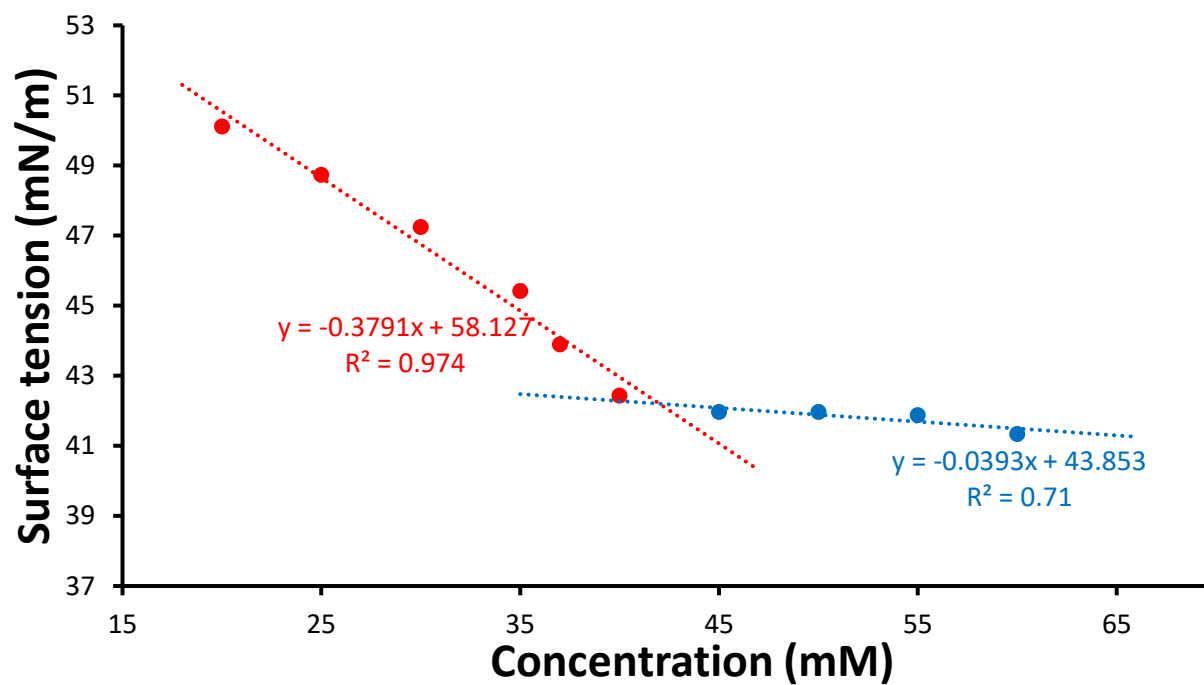


Figure S107 - Calculation of CMC (44.91 mM) for compound **41** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

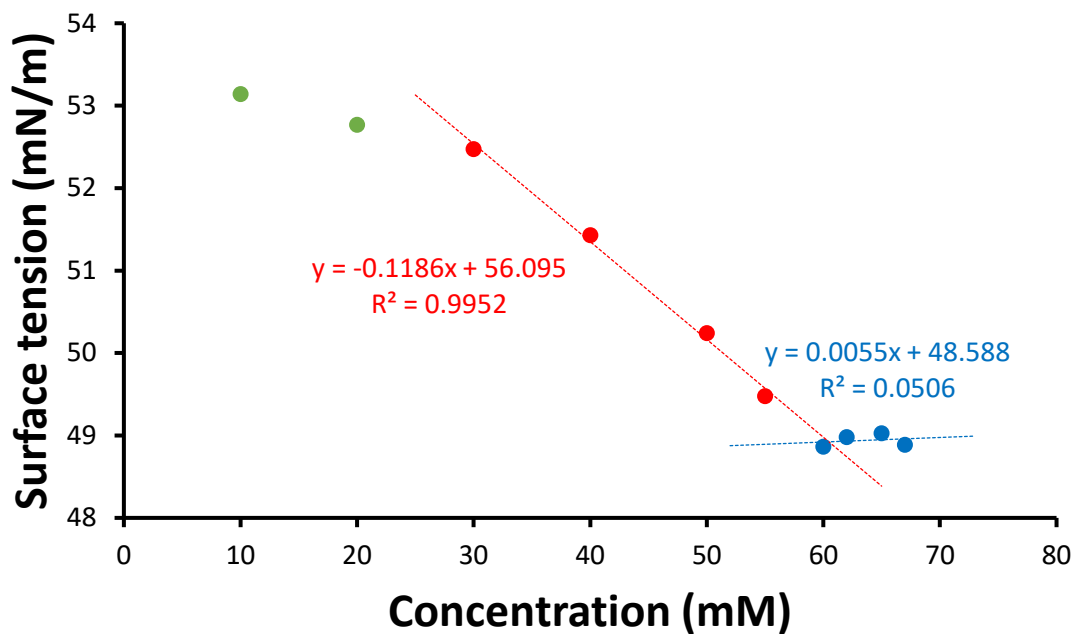


Figure S108 - Calculation of CMC (60.49 mM) for compound **42** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

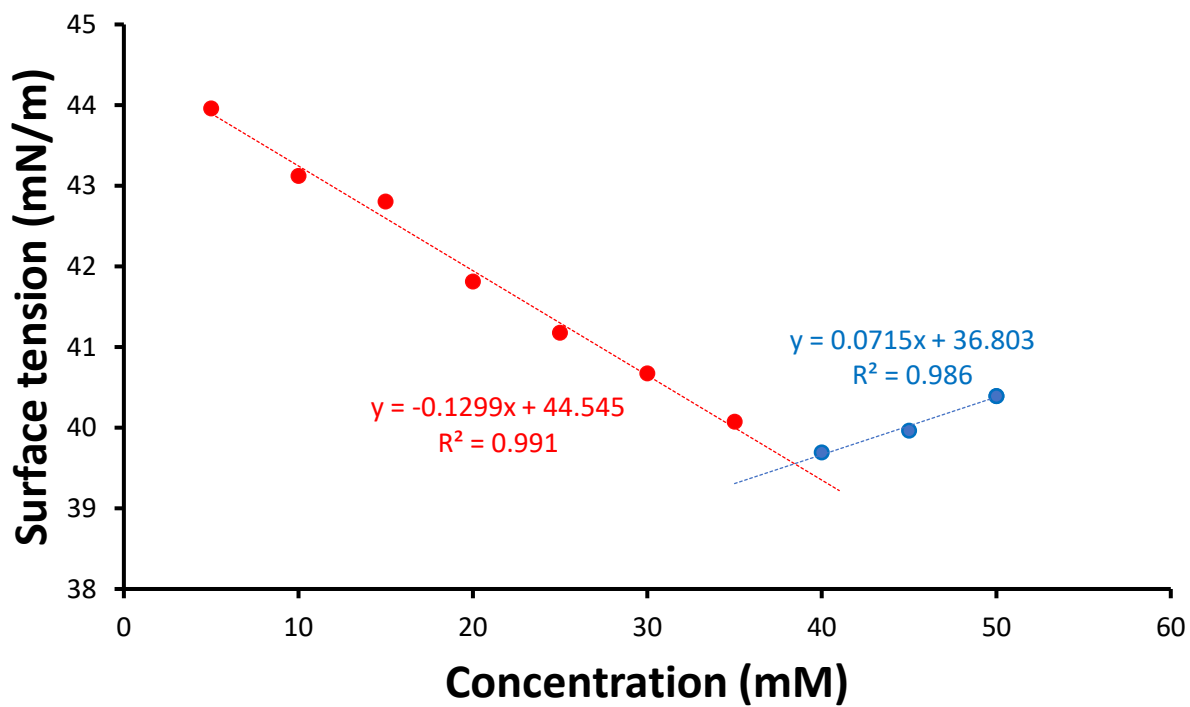


Figure S109 - Calculation of CMC (38.44 mM) for compound **43** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

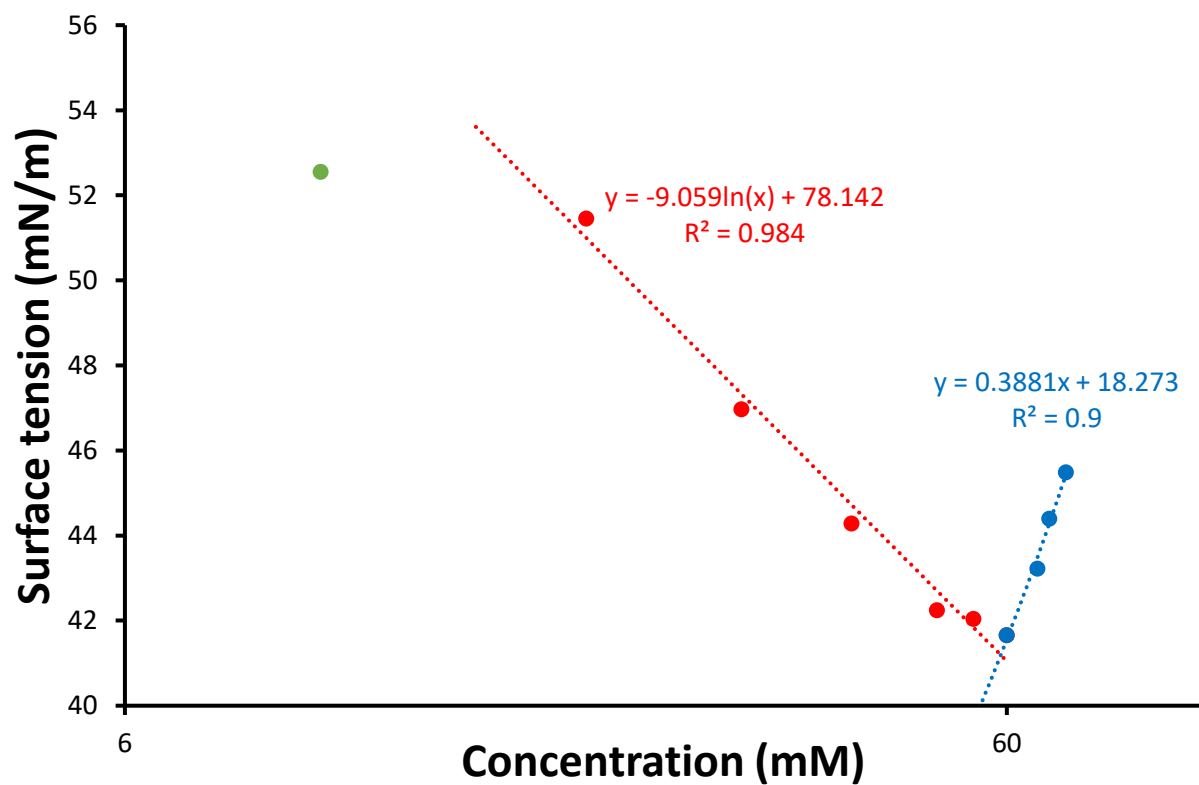


Figure S110 - Calculation of CMC (59.64 mM) for compound **44** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

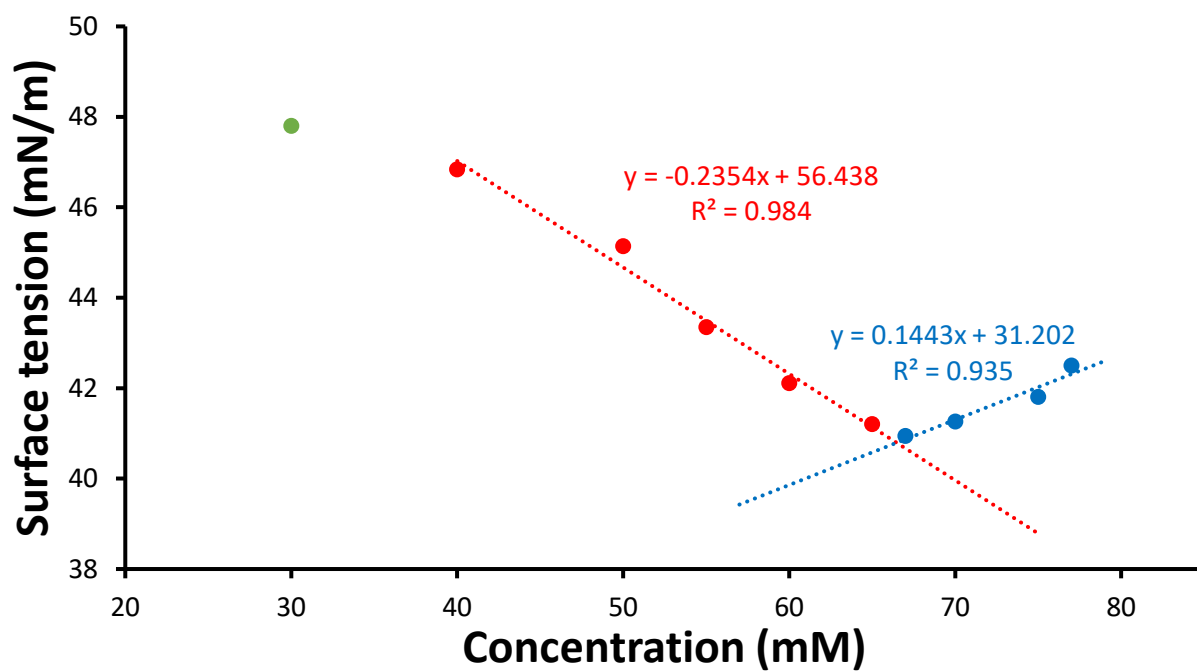


Figure S111 - Calculation of CMC (66.46 mM) for compound **45** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

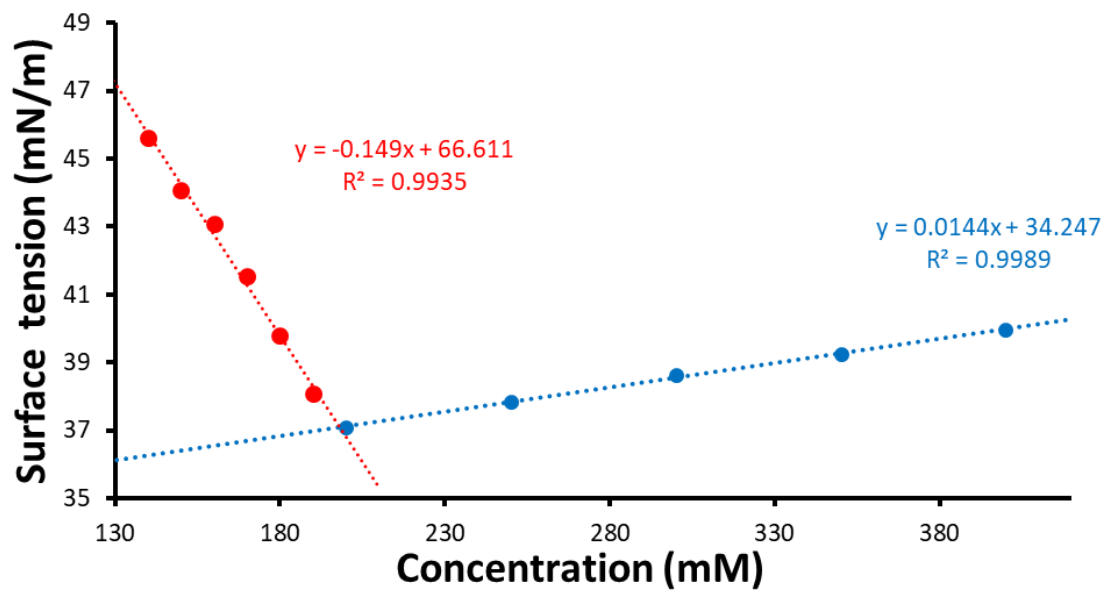


Figure S112 - Calculation of CMC (198.01 mM) for compound **50** in an EtOH: H₂O 1:19 mixture using surface tension measurements.

Overview

Table S7 - Summary of zeta potential at 5.56 mM, CMC, and surface tension at CMC. Data obtained for compounds in an EtOH: H₂O (1:19) solution.

Compound	Zeta potential (mV)	CMC (mM)	Surface tension at CMC (mN/m)
15	-21.30	28.95	30.25
16	-18.90	82.27	31.62
17	<i>a</i>	85.65	33.00
18	<i>a</i>	17.25	37.73
23	-57.17	3.69	28.65
40	-38.34	69.73	42.85
41	-27.58	44.91	42.10
42	-29.38	60.49	48.92
43	-37.38	38.44	39.55
44	-30.73	59.64	41.38
45	-35.32	66.46	40.79
50	<i>a</i>	198.01	37.10

a - Reproducible data sets could not be obtained.